

## Hydraulic Clutch Plumbing Kit Instructions




Wrap a couple of turns of masking tape tightly around where the hose needs cutting.

Using a 1mm or thinner cutting disc cut through the taped hose. If there are any stray strands of braiding these can be snipped off using some sharp side cuts.

Don't forget to blow out the dust from the hose bore.

**NOTE** don't use side cuts or pliers to cut the hose as this squashes the hose out of shape causing it to leak.

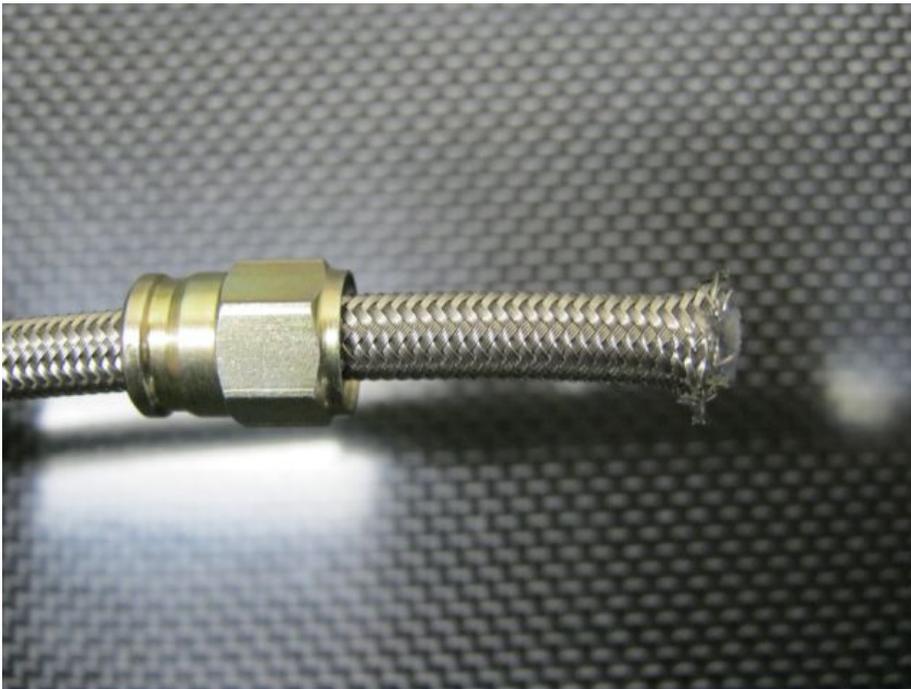

Remove the tape; slide the nut over the braiding and using a small screwdriver flare out the braiding at the hose end.



Push on the brass olive taking care not to get any strands of the braiding between the olive and PTFE inner hose.



Push the small tube on the fitting into the end of the hose, then slide the nut over the flared out braiding keeping the fitting pushed up against the brass olive. Screw the nut onto the fitting (if the nut doesn't start on the thread there may be a stray bit of braiding needing trimming). Next tighten using 2 spanners leaving approx 1mm gap between the nut and fitting.

